

# SKIP\*HOP®

252801.01

## EASY-STORE sliding tray set



### OWNER'S MANUAL

© 2019 Skip Hop, Inc.  
50 W 23 ST, NY, NY 10010  
In the US: 888.782.9548  
www.skiphop.com  
Made in China

EU REP:  
Fox Williams  
10 Finsbury Square  
London EC2A 1AF, UK

Meets or exceeds applicable  
safety standards. Conforms  
to ASTM D4236.




**⚠ WARNING:** Always use this product with adult supervision. Before each use, inspect the product. Throw away at the first sign of damage or weakness. Always check food temperature before feeding. Do not store in direct sunlight, as this may damage product. Never refreeze meals that have already been frozen. Do not allow children to play with packaging materials. Please keep all relevant information for future reference.

**EN** Read all instructions and warnings before assembly and use.



## IMPORTANT! Keep instructions for future use.

### CONTENTS:

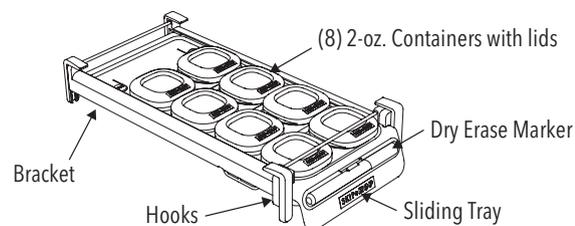






### ASSEMBLY:

Adult assembly required.

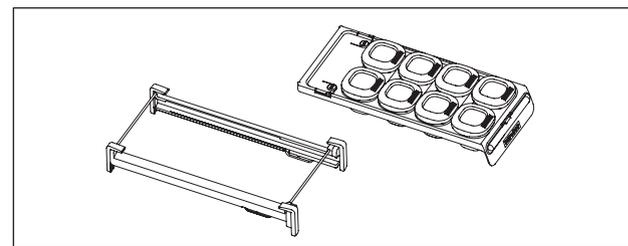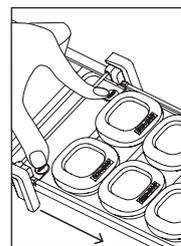

1. Remove Tray from Bracket by pressing tray tabs and sliding forward.



2. Press levers on underside of Bracket and pull forward to extend Bracket sides to full length.

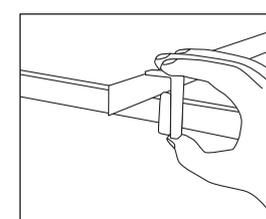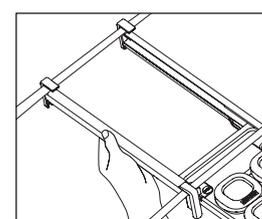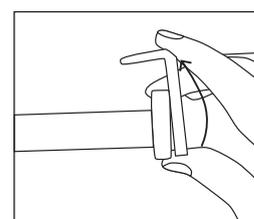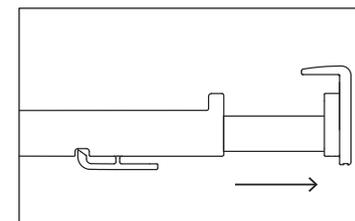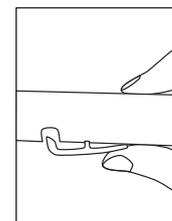

3. Tilt hooks to adjust up and down.

4. Fit Bracket to fridge or freezer shelf using the hooks.

5. Adjust sides to proper length. Adjust hooks to ensure a snug fit.

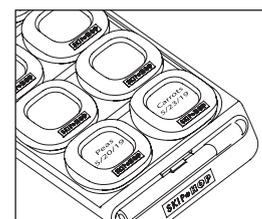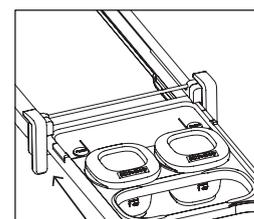

6. Slide Tray into Bracket.  
Note: tip up first, then slide in.

7. Snap Dry Erase Marker in place and fill with 2 oz. containers.

### CLEANING & CARE:

Before first use, clean the product. Dishwasher safe, top rack only. Inspect & wash thoroughly before first use and after each use. Clean after each use, as soon as possible. Freezer safe. Foods that are tomato-based or include turmeric may cause staining. Avoid over-heating foods that are high in oil, fat or sugar to prevent damage.

**Containers only:** Microwave safe. DO NOT Microwave with lid on.

**Dry Erase Marker:** Ink may stain fabric, clothing and other porous surfaces. Intended for dry erase surface only.