

SKIP*HOP®

304326-03
303600-03

SLOTH / UNICORN cry-activated soother



OWNER'S MANUAL

© 2019 Skip Hop, Inc.
50 W 23 ST, NY, NY 10010
In the US: 888.782.9548
www.skiphop.com
Made in China

Meets or exceeds ASTM F963,
EN71 and applicable safety
standards. Product and colors
may vary slightly. Please keep
all relevant information for
future reference.

EU REPS:
Carter's Holdings B.V.
Prins Bernhardplein 200
1097 JB Amsterdam
The Netherlands

Fox Williams
10 Finsbury Square
London EC2A 1AF, UK



WARNING: Do not leave product in the crib. Use product with sound module outside of the crib and away from the child. Never leave child unattended. Adult supervision required. Throw away at first sign of damage or weakness. Remove sound module before giving to child for play.

FCC:
CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAN ICES-3 (B)/NMB-3(B)

EN Read all instructions and warnings before using the cry-activated soother.

IMPORTANT! Keep instructions for future use.

CONTENTS:

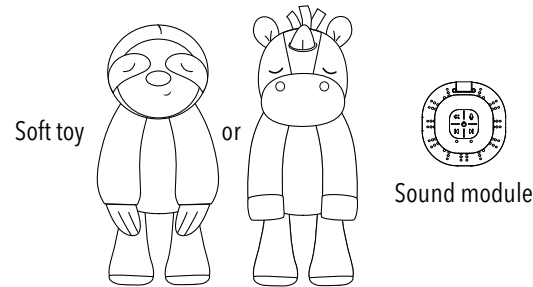


CLEANING & CARE:


Remove sound module before washing. Machine wash cold, gentle cycle. No bleach. Tumble dry low. Do not iron. Do not dry clean.

REPLACING THE BATTERIES:


Adult assembly required.

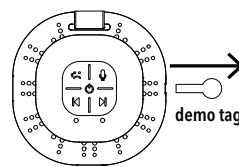


Product is shipped in Demo mode. Pull the tag to activate the normal use mode. Discard the tag. 3 AA (1.5V) Alkaline batteries are included for demo purposes only, replace with new batteries.

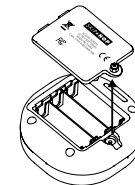

1. Loosen the battery door screw using a Philips head screwdriver.

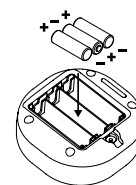

2. Open battery door compartment and insert 3 new AA (1.5V) Alkaline batteries. Be sure to insert with correct polarity.


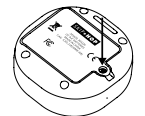


3. Position the battery door securely back into place and tighten with a screwdriver.
***Batteries should be replaced by an adult.**

INSERTING THE SOUND MODULE:

Adult assembly required.

Insert strap through sound module as shown, secure with hook-n-loop. Insert sound module into pocket on back. The pocket is designed to be tight to protect the sound module.

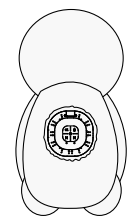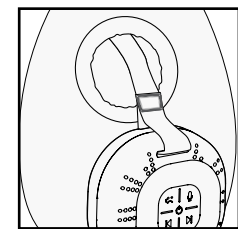


ATTACHING TO CRIB:


Adult assembly required.

Place arms over crib rail and legs between slats. Secure with hook-n-loop on hands and feet.

IMPORTANT: Position soother with the sound module facing out, with soft toy positioned outside of the crib.

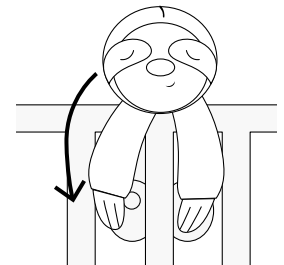

OPERATING THE SOUND MODULE:

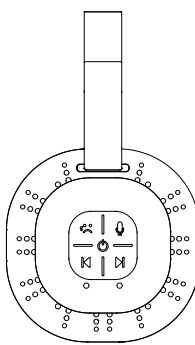

POWER ON/OFF

- Press to turn on. Music/sounds will start playing. Press again to turn off.



SONG BUTTONS

- Scroll between 3 lullabies and 3 soothing sounds (Waves, Pink Noise, Heartbeat).
- Selected music/sounds will play for 20 minutes.
- If cry sensor is off, soother turns off when music/sound is completed.
- If cry sensor is on, soother will remain in stand-by mode, waiting to detect crying.



CRY SENSOR

- Press to activate cry sensor. Blue LED light will blink 3 times to indicate the cry sensor is on, then will blink softly every 5 seconds after the initial 20-minute song is completed.
- You need to turn on cry sensor each time product is turned on.
- When cry sensor detects crying, it will play the pre-recording message, followed by 5 minutes of the last sound played.
- If there is nothing recorded, it will just play the sound.
- Press again to turn cry sensor off.



VOICE RECORDING

- Hold down the button to record a 10 second message for baby.
- For best results, wait 1 second after pressing and speak clearly into speaker.
- Message will play when cry sensor detects crying, followed by song playing for 5 minutes.
- To delete existing recording, hold down power and voice recording together at the same time for 1 second.

BATTERY INFORMATION:

At the end of life product, always dispose of used batteries properly. See section on safety and disposal information. • Batteries are to be inserted with the correct polarity. • Do not burn batteries. • Non-rechargeable batteries are not to be recharged. • Rechargeable batteries are only to be charged under adult supervision. • Rechargeable batteries are to be removed from the toy before being charged. • Exhausted batteries are to be removed from the toy. • The supply terminals are not to be short-circuited. • Different types of batteries or new and used batteries are not to be mixed. • Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.

CONSUMER INFORMATION: SAFETY AND DISPOSAL

At end of product life remove batteries from product by following the battery replacement instructions. Substances used in batteries pose potential environmental and health effects. Do not mix waste batteries with other waste. Keep waste batteries separate. Do not dispose of by landfill or by incineration. Return waste batteries to your point of purchase or recycle center. Recycle all waste batteries per local regulation. Do not dispose of Waste Electrical Electronic Equipment (WEEE), including batteries, in unsorted municipal waste; collect separately. Dispose of at WEEE collection sites per local regulation. WEEE contains chemicals that are hazardous to the environment and human health. The end-user's participation is critical to the success of WEEE collection.

