SKIP*HOP


sleek seat booster



OWNER'S MANUAL

IMPORTANT! KEEP FOR FUTURE REFERENCE.

Read all instructions before assembly and use of the Booster Seat.

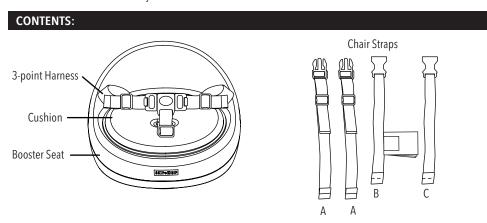

CLEANING AND CARE:

Wipe clean with a damp sponge or cloth. No bleach. Dry flat. Do not iron. Do not dry clean.

MARNING!

 
Children have suffered **head injuries**, including skull fractures, **after falling** with or from booster seats.

- Check that booster seat is **securely attached** to adult chair before each use.
- Always use restraints until child is able to get in and out of booster seat without help (about 2 ½ years old). Adjust to fit snugly.
- Never allow child to push away from table.
- Never lift and carry child in booster seat.
- Stay near and watch your child during use.
- Always use the restraint system and the chair attachment system.
- Always check the security and the stability of the chair mounted seat before use.
- Never use this product on any seat that does not have a seat back.
- Prevent serious injury or death. Do not use in motor vehicles.
- Discontinue use if damaged, broken or any parts are missing.
- Use this product only for children capable of sitting upright unassisted.

© Skip Hop, Inc. SKIP HOP and MUST-HAVES MADE BETTER are trademarks owned by Skip Hop, Inc. All rights reserved.

100 W 33 ST, STE 1125, NY, NY 10001 In the US: 888.782.9548 www.skiphop.com

STEP 1: ASSEMBLE CHAIR STRAPS




1. Insert "A" straps into slots as shown, so that the "T" ends are inserted fully. Pull to ensure that straps are secured. Adjusters should be visible when assembled to chair.

 Adult assembly required.








2. Insert "B" and "C" straps into slots as shown, so that the "T" ends are inserted fully. Pull to ensure that straps are secured.

STEP 2: ASSEMBLE BOOSTER SEAT TO CHAIR

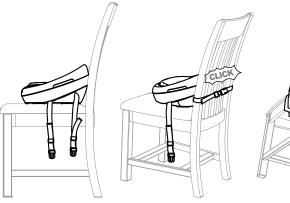






1. Place the booster seat on a chair.


2. Buckle the chair back straps together. You will hear a "click" when buckle locks.


3. Buckle the chair bottom straps together. You will hear a "click" when buckle locks.

MINIMUM ADULT CHAIR DIMENSION REQUIREMENT

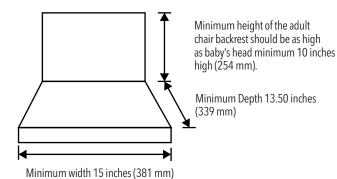



STEP 3: SECURING HARNESS

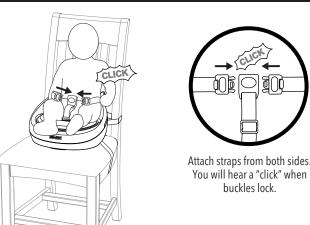

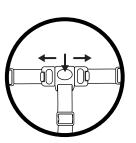

To unbuckle, press the button in the middle.

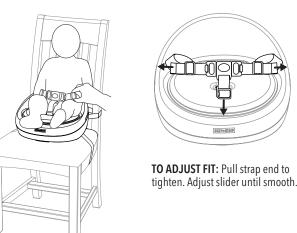

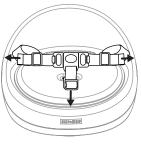

DISASSEMBLY:



Remove 3 point harness from slots.

